

# **DWT-6507A/B**

#### Counter Window Intercom Kit

SPON Digital Window Intercom Station DWT-6507A/B adopts DSP multi-channel voice technology, effectively prevent howling and channel interference, truly realize digital full-duplex HD intercom. It can be deployed on any service area such as Bank、Hospital、Scenic Spot and so on.



## **MAIN FEATURES**

### **Design & Usability**

- Internal unit with a full touch button design, providing a noiseless operation and easy cleaning.
- Sleek, single cable design for all connections, ensuring a tidy workspace.
- Professional metal cavity structure, eliminating device resonance for pure sound quality.





#### **Audio Quality & Customization**

- Sound source recognition with ambient noise suppression and automatic volume adjustment.
- Three selectable scene modes (noise/standard/ quiet) with easy rotary switch control.
- Customizable service voice prompts for a more personalized user experience.

### **Connectivity & Functionality**

 Integrated Recording Output interface for seamless audio recording with external devices like DVRs

# **SPECIFICATION**


POWER PARAMETERS		
Power Supply:	DC12V,1.5A/2A	
Standby Power Consumption:	≤5W	

AUDIO PARAMETERS	
Audio Codec:	PCM, AAC
Audio Sampling:	8KHz~32KHz
Frequency Response:	20Hz~16KHz
SNR:	>90dB
Gooseneck Mic Type(Internal):	Condenser ,Uni-diectivity
Built-in Speaker(Internal):	3W ,8Ω
Built-in Mic Type(External):	-46dB Φ9.7*5.0, Uni- diectivity
Built-in Speaker(External):	3W ,4Ω

ACCESSORIES
1×Power Adaptor(12V/1.5A)
3×Wiring harness(3*100mm)
1×Microphone pole(DC-300B)
1×EV-cotton(SPEV-63)
1×Wiring Terminal(3.81-2P)
3×Cable clamp(HC-100)
1×Bushings(black external machine dedicated)
1×Quality Certificate&Warranty Card
1×Quick Installation Guide

MECHANICAL & ENV	IRONMENTAL PROPERTIES
Mounting Method:	Desktop Installation
Installation Environment:	Dry Indoor Locations
Operating Temperature:	-10°C∼55°C
Operating Humidity:	≤90% RH non-condensing
Panel Material(Internal):	Aluminum Alloy
Button Material(Internal):	Metal
Back Shell Material(Internal):	Aluminum Alloy
Back Shell Material(External):	Aluminum Alloy
Net Shell Material(External):	Steel
Product Dimension:	95×160×46.5mm(Internal), 83×24mm(External)
Product Weight:	0.44kg(Internal),0.2(External)
Product Warranty:	2 Years

### PORTS DESCRIBTION

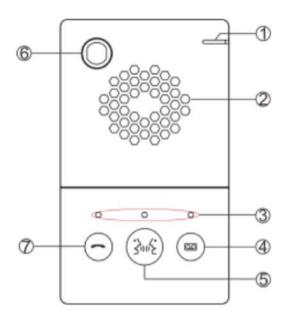

#### Front Panel

- ① **Network status indication:** red light is offline, green light is online.
- ② Loudspeaker: amplify the audio from the external window intercom.
- ③ Indicator light: The three indicator light correspond to the recording button, intercom button, Voice Broadcast button.
- (4) Recording Button: Reserved
- (5) Intercom button: press the button to communicate with the external window intercom, finish the conversation by pressing the button again. The intercom button light blue during conversation.
- **(6) Gooseneck microphone socket:** plug the gooseneck microphone and fix the screw.
- 7) Voice broadcast button(left):


When the intercom button is on (blue light ON):


- · Press voice broadcast button shortly to broadcast "Hello, welcome" message.
- · Press long (1 second) to broadcast "Thank you, welcome next time".
- · The broadcast button flashes green during broadcasting.

### Light Side

#### 1) Scene mode adjustment switch:

- · Noisy Mode (to the front)
- · Standard Mode (in the middle)
- · Quiet Mode (to the back)

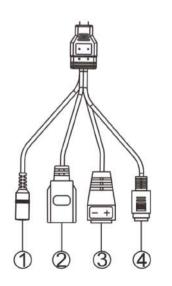


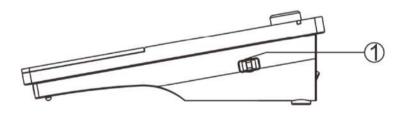

#### Interface Line

- (1) Power interface: connect with DC12V ,1.5A/2A power.
- (2) Network interface: Reserved.
- ③ Analog audio output interface: output analog audio, connect with DVR or IP camera.
- 4 External window intercom interface.


# **INTERFACE DESCRIPTION**

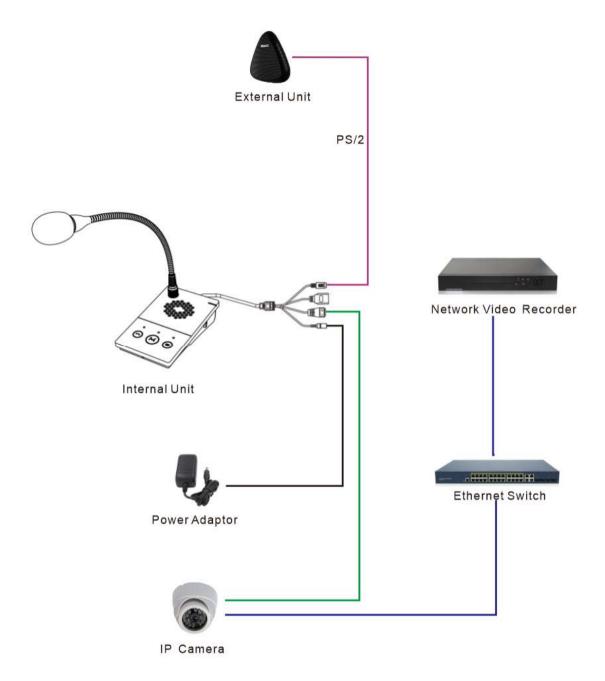

# **APPLICATIONS**

#### Application 1

The Digital Window Intercom Station DWT-6507A with recording output interface which can output the sound between the DTW-6507A and DTW-6507B to IP camera to realize audio and video synchronously recording.

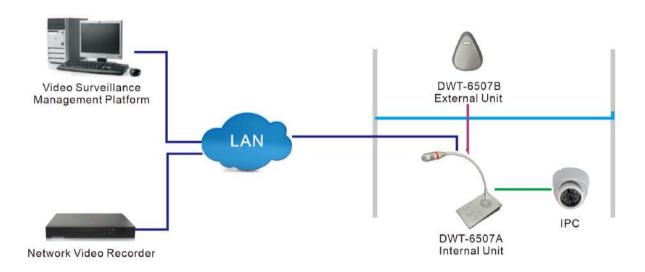

### Application 2

The Digital Window Intercom Station DWT-6507A/B recording output interface can be defined as only output the sound of internal unit. In this mode, the recording output can be connected with a loop amplifier to provide a clear sound to the person with hearing impairment.



# **CASES**









# **DIMENSION & INSTALLATION**

(1) Firstly, put the internal window intercom on a suitable place; (Please refer to the installation manual).

- (2) Fixing external window intercom, tear off the glue protective layer at reverse side, then paste the external window intercom on the glass;
- (3)Connecting internal window intercom with external window intercom according to the connection diagram.

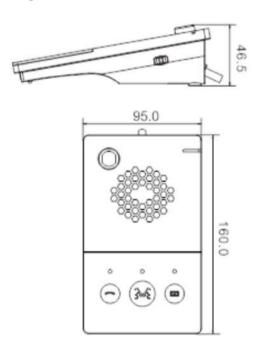

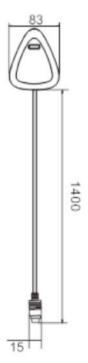







Mobile: +86 138 7314 3517

**Email:** inquiry@sponcomm.com **Tel:** +86 731 8557 0190

Address: No.70, Nantang Road, High-Tech Zone, Changsha, China.